



NTL3001-MP3



Package Contents

1 x NTL3001-MP3

1 x Power Adapter (5V DC regulated output)

CAUTION: Using other power adaptor may damage the player.

1 x Audio Patch Cord

1 x User's Manual

1 x Mounting Plate

Installation

- Copy desired sound files to the USB drive. Add a unique three-digit number (the file number), ranging from 001 to 099, in front of each file's name. Insert the USB drive into the player.
- 2. Using the provided audio patch cord, connect one of the player's two output ports to the phone system's music input port. The player works well with both 8 and 600 Ohm inputs.
- 3. Use only the provided power adaptor to power the unit. Using other power adaptor will void the warranty and most likely damage the unit.
- 4. The LED display will show the file number currently being played. Press the Select button to go to the next file. If you select past the last file the display will show 'AL', which means all files will be played in a big loop. Pressing the Select button again will go back to the first file.
- 5. Call yourself from a second line and put yourself on hold. Listen to the audio and adjust the volume to the proper level.
- The internal speaker can be turned on/off by pressing the Speaker button. It is provided for audio content verification and trouble-shooting purposes. It is recommended to be turned off during normal operation in order to save power.
- 7. The USB drive may be swapped without turning the power off.
- 8. In case of power outage, the player will automatically start to play the same file after the power is restored.

Specifications

Number of Files: 99 max. (play single or play all) File Type Supported: MP3 320kbps or lower

USB Drive Capacity: 32 GB max. (500 hours of 128 kbps MP3 audio)

USB File System: FAT (FAT16) or FAT32

Output Power: 200mW max.

Trouble shooting

The power LED is on but there is no sound.

- 1. Make sure the file type is supported.
- 2. Make sure the output volume is turned up.
- 3. Make sure the audio patch cord is securely connected.
- 4. Make sure the file number is assigned.

The sound quality is poor.

- 1. Make sure the audio patch cord is securely connected.
- 2. Try turning the volume down a little bit.

One Year Limited Warranty

Eletech ("we" or "us") warrants this PRODUCT against defects in materials and workmanship to the original purchaser, under normal use and conditions, for a period of ONE(1) YEAR from the date of original purchase. If you discover a defect, we will at our option, either repair the PRODUCT with new or refurbished replacement parts, or replace the PRODUCT if we are unable to restore it to good working order after a reasonable number of attempts at no charge, subject to verification of the defect or malfunction and proof of the date of purchase. This limited warranty does not apply to damage caused by (1) a direct lightning strike, (2) misuse, neglect, casualty, or improper installation, (3) repairs done or attempted by someone not authorized by us, (4) improper use, maintenance or modification of this PRODUCT, or (5) any other cause outside of our control. This Limited Warranty does not apply to anyone other than the original purchaser of the PRODUCT.

Disclaimer

Norelco Safecam shall not be held liable for any loss or claims by you or any other person or entity that may arise through the use of this product.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.