



 
## RAVE RMC APP Manual

- Zone selection
- Source selection
- Zone Power
- Zone Mute
- All Zones ON/OFF
- Party Mode
- Tone/Balance Control
- Fader Volume Control



**RAVE RMC**




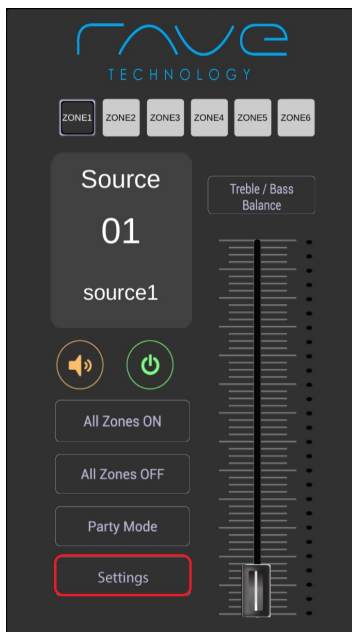


## Settings

1. Press the **Settings** button to enable the communication to the RMC connected to your network. Ensure both devices are connected to the same network. Press the **Auto** button to find your RMC device on your network. Select your device and model from the menu.
2. Press OK to search for the RMC device on your network. Once the device is found the APP will close and relaunch.
3. Press **Manually enter** to input the MRC static IP address. Enter the IP address in the drop down menu, press OK to continue.

 
1

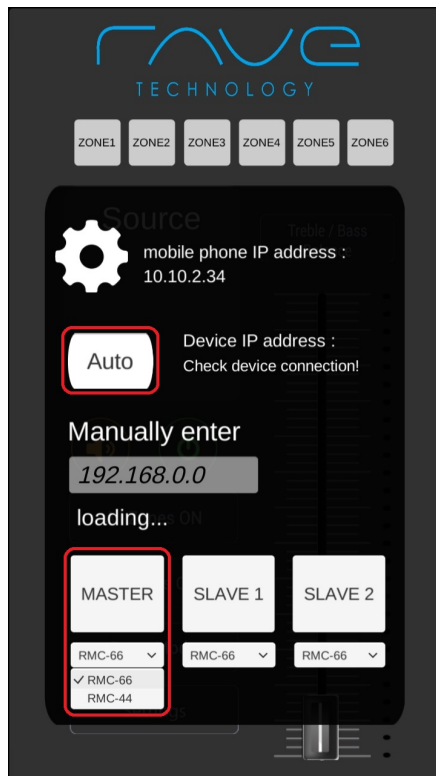


2

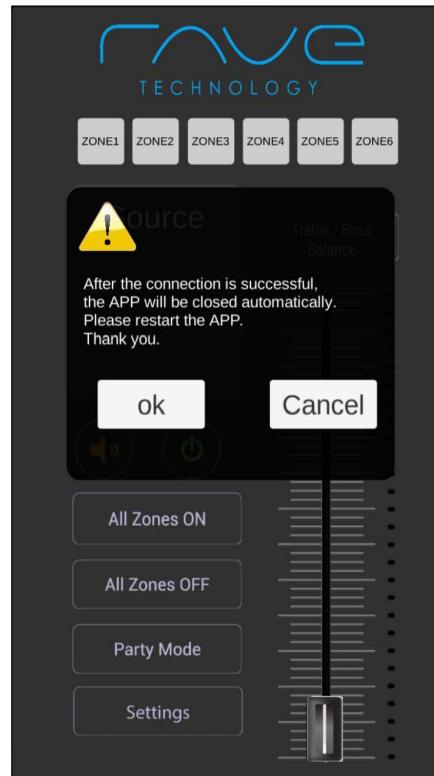 


3

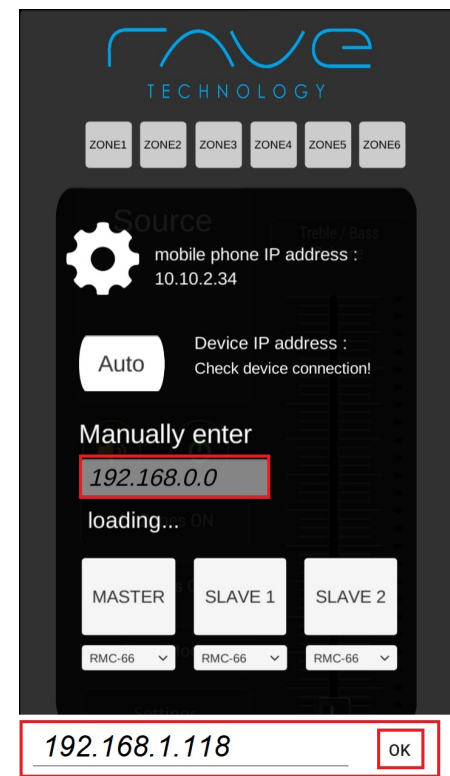 


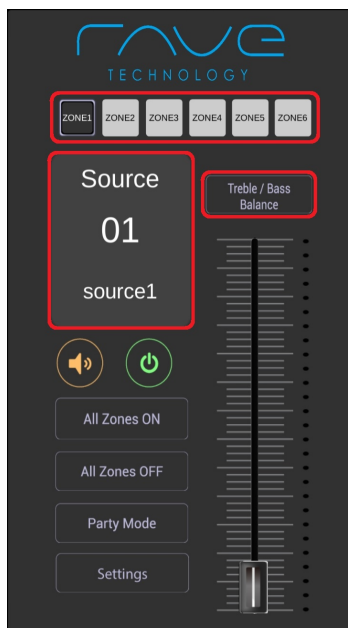 

## Zones/Source/Tone & Balance

  1. Press the **zone** (1-6) buttons to select individual **zone** control. You can also swipe left or right to select a **zone**. Press and hold the **zone** button to customize. In the customization menu press the area to the right of each **zone** to customize.
2. Press the the **Source** button to select **source** input (1-6) for the zone you have selected. Press and hold the **Source** button to customize the name of each audio **Source**. In the customization menu press the area to the right of each Source to customize.
3. Press the **Tone/Balance** button to change **Bass** and **Treble** as well as **Balance** setting.

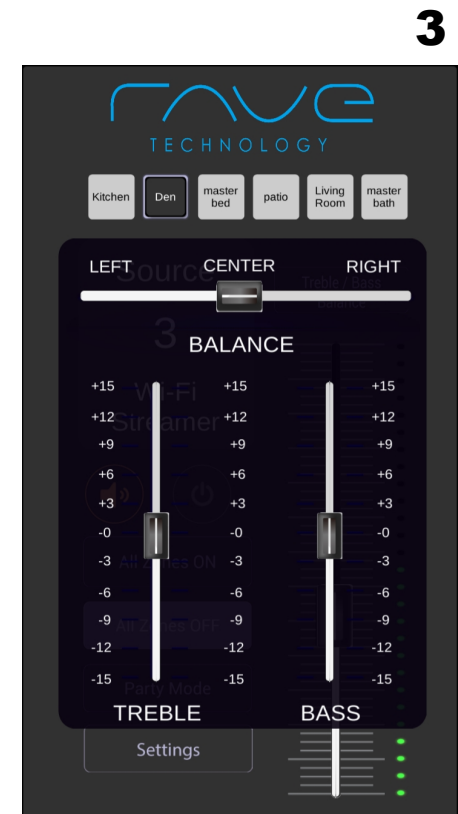

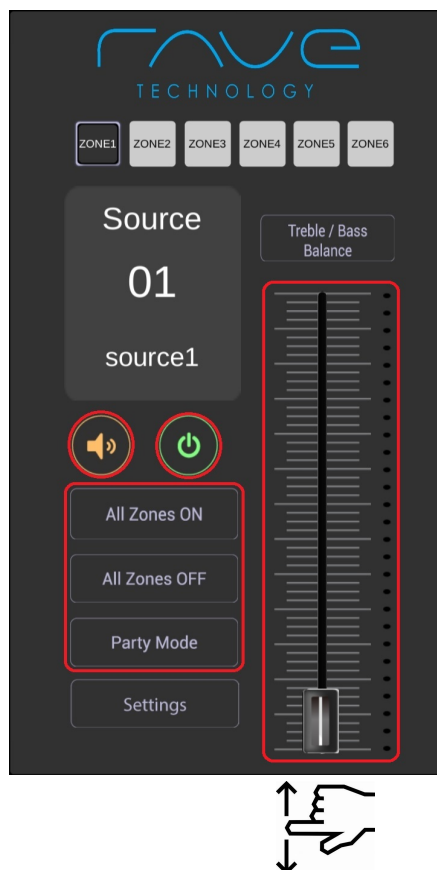

## **Zone Mute**

The speaker button/icon is used to mute/un-mute each zone.

## **Zone On/Off**

The power button/icon is used to power ON or OFF each zone.

## **All Zones ON**

This button is used to power ON all zones.

## **All Zones OFF**

This button is used to power OFF all zones.

## **Party Mode**

This button is used to change all zone source inputs and audio settings to that of the selected party mode zone.

## **Volume Fader Control**

This slider (fader) is used to adjust the volume level of each zone. Press finger on the control slider and move the control up to increase and down to decrease volume level.

Rave Technology  
4100 East Baldwin Road Holly,  
Michigan, 48442 USA  
Tel: 866-303-2629  
[contact@ravetechnology.com](mailto:contact@ravetechnology.com)